

Re-tuning: Toshiba Freeview TV/DVD

[Number] Steps
(Steps 1 – 5)


This guide can be used to help you re-tune any of the following products with the remote control below:

Digital Television: 19DV555, 19DV556, 22DV555, 22DV556, 19DV615, 19DV616, 22DV615, 22DV616, 26DV615DB


***Make sure your box is on and press 80 for the BBC News Channel.**




1) Press the Digital Menu button and select Set Up (Icon Number three) using the → button. Press Ok.

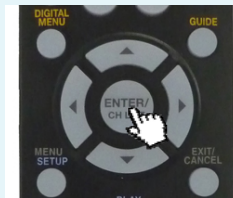

2) Select Auto Scan on the first line using the ↓ button. Press Ok.

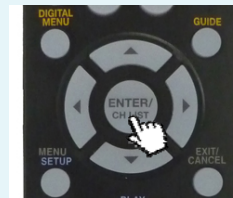


3) The following message will appear: Auto Scan will delete all previously stored channels. Do you want to proceed? Select Yes.

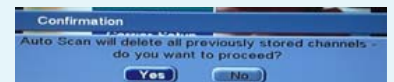

4) A status report will appear on screen monitoring the progress. No action is required.



5) Once complete the main menu will re-appear with BBC playing in the background. No action required.

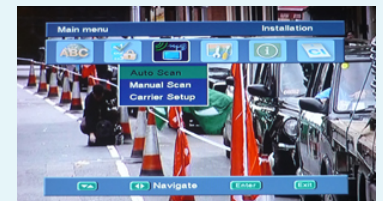

Manufacturing Helpline: [0844 856 0730]

* Remote Control Layout and Screen Shots may vary on selected models.

Email: www.home-entertainment.toshiba.co.uk