

Re-tuning: Toshiba Freeview TV

[Number] Steps
(Steps 1 – 5)

This guide can be used to help you re-tune any of the following products with the remote control below:

Digital Television: C3030D, C3035D, X3030D, Z3030D, XF355D, ZF355D, CV505D, AV505D, AV504D, XV505D, RV555D, ZV555D

***Make sure your box is on and press 80 for the BBC News Channel.**




1) Press the Menu button and select Set Up menu using the button. Press Ok.




2) Select Auto Tuning on the Third line using the button. Press Ok.



3) The following message will appear on screen: All previous digital programmes and settings will be deleted. Continue?

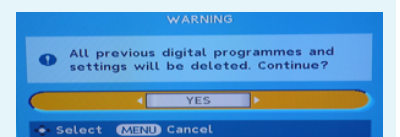

4) A status report will appear on screen monitoring the progress. No action required.

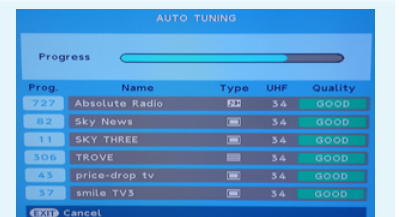

5) Once complete the following image will appear on screen stating the number of Digital TV channels found.



Manufacturing Helpline: [0844 856 0730]

* Remote Control Layout and Screen Shots may vary on selected models.

Email: www.home-entertainment.toshiba.co.uk